

# GASTEC

## No.137

### Instructions for Chloroform Detector Tube

#### FOR SAFE OPERATION :

Carefully read this manual and the instruction manual of your Gastec Gas Sampling Pump.

#### ⚠ WARNING :

1. Use only Gastec detector tubes in a Gastec pump.
2. Do not interchange or use non-Gastec parts or components in Gastec's detector tube and pump system.
3. Using non-Gastec parts or components in Gastec's detector tube and pump system or using a non-Gastec detector tube with a Gastec pump or using a Gastec detector tube with a non-Gastec pump may damage your detector tube and pump system, or may cause serious injuries, or death to the end-user. It will also void all warranties, and guarantees regarding performance and data accuracy.

#### ⚠ CAUTION : If you do not observe the following precautions, you may suffer injuries or damage the product.

1. When breaking the tube ends, keep away from eyes.
2. Do not touch the broken glass tubes, broken pieces and reagent with bare hand(s).
3. The sampling time represents the time necessary to draw the air sample through the tube. The tube must be positioned in the desired sampling area for the entire sampling time or until the flow finish indicator indicates the end of the sampling.

#### △ NOTES : For maintaining performance and reliability of the test results, observe the following.


1. Use Gastec Gas Sampling Pump together with Gastec Detector Tubes only for the purposes specified in the instruction manual of the detector tube.
2. Use this tube within the temperature range of 0 - 40°C (32 - 104°F).
3. This tube may be interfered with by the coexisting gases. Please refer to the table "INTERFERENCES" below.
4. The shelf life and storage condition of the tube are marked on the label of the tube box.

#### APPLICATION OF THE TUBE :

Use this tube for detecting Chloroform in the air or in industrial areas and for determining the environmental atmospheric condition.

#### SPECIFICATION :

(Because of Gastec's commitment to continued improvement, specifications are subject to change without notice.)

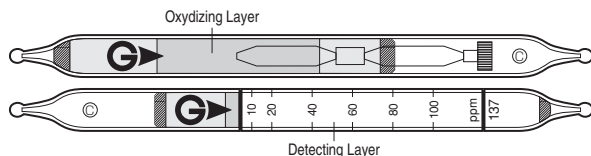

Measuring Range	4 - 10 ppm	10 - 100 ppm	100 - 400 ppm
Number of Pump Strokes	7	5	3
Stroke Correction Factor	0.4	1	4
Sampling Time	1.5 minutes per pump stroke		
Detecting Limit	1 ppm ( n = 7 )		
Colour Change	White → Orange		
Reaction Principle	$\text{CHCl}_3 + \text{I}_2\text{O}_5 + \text{H}_2\text{S}_2\text{O}_7 \rightarrow \text{Cl}_2$ $\text{Cl}_2 + \text{o-Tolidine} \rightarrow \text{Orange product}$		

**Coefficient of Variation:** 15% (for 10 to 20 ppm), 10% (for 20 to 100 ppm)

**\*\* Shelf Life:** Please refer to the validity date printed on the tube box.

**\*\* Store the tubes in a dark and cool place.**

#### CORRECTION FOR TEMPERATURE, HUMIDITY AND PRESSURE :

**Temperature :** No correction is required.

**Humidity :** To correct for humidity, use the formula below :

True Concentration = Tube reading x 10 / Absolute Humidity (mg/L)

**Pressure :** To correct for pressure, use the formula below :

$$\frac{\text{Tube Reading (ppm)} \times 1013 \text{ (hPa)}}{\text{Atmospheric Pressure (hPa)}}$$

#### MEASUREMENT PROCEDURE :

1. For checking the leakage of the pump, insert a freshly sealed detector tube into the pump. Follow the instructions provided with the pump operation manual.
2. Break the tips off the fresh primary tube and analyser tube by snapping off each tube end in the tube tip breaker of the pump.
3. Connect the © marked ends with rubber tubing after snapping off each end.
4. Insert the analyser tube securely into pump inlet with the arrow (G) on the tube pointing toward the pump.
5. Make certain the pump handle is all the way in. Align the guide marks on the pump body with the guide marks on the handle.
6. Pull the handle all the way out until it locks at one pump stroke (100 mL). Wait 1.5 minutes and confirm the completion of the sampling. Repeat the above sampling procedure four more times.
7. For smaller measurements less than 10 ppm, repeat the above sampling procedure two more times until the stain reaches the first calibration mark. For measurements higher than 100 ppm, prepare a fresh tube and perform three pump strokes.
8. Read the concentration level at the interface where the stained reagent meets the unstained reagent.
9. If necessary, multiply the readings by the correction factors of pump strokes and atmospheric pressure.

#### INTERFERENCES :

Substance	Concentration	Interference	Interference gas only
Chlorine, Bromine, Iodine	≥ 1/20	+	Orange
Unsaturated Halogenated Hydrocarbons	≥ 1/20	+	Orange
Saturated Halogenated Hydrocarbons	≥ 1/10	+	Orange

This table of interference gases primarily expresses the interference of each coexisting gas in the concentration range, that is equivalent to the gas concentration. Therefore, the test result may show positive results due to other substances not listed in the table. If more information is needed, please contact us or our distributors in your territory.

#### DAINGEROUS AND HAZARDOUS PROPERTIES :

Threshold Limit Value-Time Weighted Average by ACGIH (2012) : 10 ppm

#### INSTRUCTIONS ON DISPOSAL :

The reagent of the primary tube uses a small amount of hexavalent chromium. The reagent of the analyser tube uses a small amount of hexavalent chromium. When disposing of the tube regardless of whether it has been used or not, follow the rules and regulations of your local government.

#### WARRANTY :

If you have any questions regarding gas detection and the quality of the tubes, please feel free to contact your Gastec representatives.

Manufacturer: Gastec Corporation  
 8-8-6 Fukayanaka, Ayase-City, Kanagawa 252-1195, Japan  
<http://www.gastec.co.jp/>  
 Telephone +81-467-79-3910 Facsimile +81-467-79-3979

IM00137E2  
 Printed in Japan  
 12G1Z