

# GASTEC No.4S Instructions for Hydrogen Sulphide Detector Tube

## FOR SAFE OPERATION :

Carefully read this manual and the instruction manual of your Air Sampling Pump carefully.

**⚠ CAUTION :** If you do not observe the following precautions, you may suffer injuries or damage the product.

1. When breaking the tube ends, keep away from eyes.
2. Do not touch the broken glass tubes, broken pieces and reagent with bare hand(s).

**△NOTES :** For maintaining performance and reliability of the test results, observe the following.


1. Use Gastec Gas Detector Tube together with Gas Sampling Device which can take sample at 150 mL/minute.
2. Use this tube within the temperature range of 0 - 40°C (32 - 104°F).
3. Use this tube within the relative humidity range of 0 - 90%.
4. This tube may be interfered with by the coexisting gases. Please refer to the table "INTERFERENCES" below.
5. The shelf life and storage condition of the tube are marked on the label of the tube box.

## APPLICATION OF THE TUBE :

Use this tube for detecting Hydrogen Sulphide in the air or in industrial areas and for determining the environmental atmospheric condition.

## SPECIFICATION :

(Because of Gastec's commitment to continued improvement, specifications are subject to change without notice.)

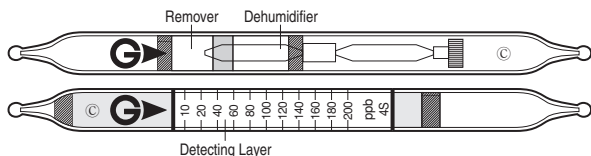

Measuring Range	10 – 200 ppb
Sampling Method	Air Sampling Device – Motor Driven
Flow Rate	150 mL/minute
Sampling Time	5 minutes (Total 750 mL)
Colour Change	Yellow → Purple
Reaction Principle	$H_2S + HgCl_2 \rightarrow HCl$ $HCl + Base \rightarrow Chloride$

**Coefficient of Variation :** 10% (for 10 to 60 ppb), 5% (for 60 to 200 ppb)

**\*\*Shelf Life :** Please refer to the validity date printed on the tube box.

**\*\*Store the tubes at 10°C (50°F) or below in the refrigerator.**

## CORRECTION FOR TEMPERATURE, HUMIDITY AND PRESSURE :

**Temperature :** Correct for temperature with the table below.

Temperature °C(°F)	0 (32)	5 (41)	10 (50)	15 (59)	20 (68)	25 (77)	30 (86)	35 (95)	40 (104)
Correction Factor	0.9	0.925	0.95	0.975	1.0	1.025	1.05	1.075	1.1

**Humidity :** No correction is required.

**Pressure :** To correct for pressure, use the formula below :

$$\frac{\text{Tube Reading (ppb)} \times 1013 \text{ (hPa)}}{\text{Atmospheric Pressure (hPa)}}$$

## MEASUREMENT PROCEDURE:

1. Break the tips off the fresh primary tube and analyser tube by snapping off each tube end in the tube tip holder supplied.
2. Connect the © marked ends with rubber tubing after snapping off each end.
3. Insert the analyser tube securely into pump inlet with the arrow (➔) on the tube pointing toward the pump.
4. Set the flow metre at 150 mL/min and timer to "5 minutes" of the sampler. Press the power switch of the sampler to start the sampling.
5. After the sampling, remove the detector tube from the sampler.
6. Read the concentration from the length of discolouration of the tube.

## INTERFERENCES :

Substance	Interference	Interference gas only
Ammonia	No	No discolouration
Methyl Mercaptan	No	No discolouration
Nitrogen Dioxide	No	No discolouration
Sulphur Dioxide	No	No discolouration

This table of interference gases primarily expresses the interference of each coexisting gas in the concentration range, that is equivalent to the gas concentration. Therefore, the test result may show positive results due to other substances not listed in the table. If more information is needed, please contact us or our distributors in your territory.

## DANGEROUS AND HAZARDOUS PROPERTIES :

Threshold Limit Value-Time Weighted Average by ACGIH (2012) : 1 ppm

Threshold Limit Value-Short Term Exposure Limit by ACGIH (2012) : 5 ppm

## DISPOSAL INSTRUCTION :

The reagent of the primary tube does not use toxic substances. The reagent of the analyser tube uses a small amount of inorganic mercury. When disposing the tube regardless of whether it has been used or not, follow the rules and regulations of your local government.

## WARRANTY :

If you have any questions regarding gas detection and quality of the tubes, please feel free to contact your Gastec representatives.

Manufacturer : Gastec Corporation  
8-8-6 Fukayanaka, Ayase-City, Kanagawa 252-1195, Japan  
<http://www.gastec.co.jp/>  
Telephone +81-467-79-3910 Facsimile +81-467-79-3979

Printed in Japan  
12J1Z