

GASTEC Instructions for No. 6 Water Vapour Detector Tube

FOR SAFE OPERATION:

Carefully read this manual and the instruction manual of your Gastec Gas Sampling Pump.

⚠ WARNING:

1. Use only Gastec detector tubes in a Gastec pump.
2. Do not interchange or use non-Gastec parts or components in Gastec's detector tube and pump system.
3. Using non-Gastec parts or components in Gastec's detector tube and pump system or using a non-Gastec detector tube with a Gastec pump or using a Gastec detector tube with a non-Gastec pump may damage your detector tube and pump system, or may cause serious injuries, or death to the end-user. It will also void all warranties, and guarantees regarding performance and data accuracy.

⚠ CAUTION: If you do not observe the following precautions, you may suffer injuries or damage the product.


1. When breaking the tube ends, keep away from eyes.
2. Do not touch the broken glass tubes, broken pieces and reagent with bare hand(s).
3. The sampling time represents the time necessary to draw the air sample through the tube. The tube must be positioned in the desired sampling area for the entire sampling time or until the flow finish indicator indicates the end of the sampling.

⚠ NOTES: For maintaining performance and reliability of the test results, observe the following.

1. Use Gastec Gas Sampling Pump together with Gastec Detector Tubes only for the purposes specified in the instruction manual of the detector tube.
2. Use this tube within the temperature range of 10 - 40°C (50 - 104°F).
3. This tube may be interfered with by the coexisting gases. Please refer to the table "INTERFERENCES" below.
4. The shelf life and storage condition of the tube are marked on the label of the tube box.
5. Keep the detector tube temperature lower than the gas temperature.
6. This tube is highly sensitive to the ambient humidity. Do not leave the tube exposed to air after breaking the tips. Immediately place the tube into the sampling site. If some stains are observed prior to the sampling, the tube must be discarded and replaced by new one.

APPLICATION OF THE TUBE: Use this tube for detecting Water Vapour in the air or in industrial areas and for determining the environmental atmospheric condition.

SPECIFICATION: (Because of Gastec's commitment to continued improvement, specifications are subject to change without notice.)

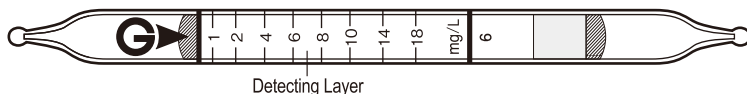

Measuring Range	0.5 - 1 mg/L	1 - 18 mg/L	18 - 32 mg/L
Number of Pump Strokes	2	1	1/2
Stroke Correction Factor	1/2	1	Please refer Fig.1 Correction Chart.
Sampling Time	45 seconds per pump stroke		30 seconds
Detecting Limit	0.1 mg/L (n = 2)		
Colour Change	Yellowish green → Purple		
Reaction Principle	$H_2O + Mg(ClO_4)_2 \rightarrow Mg(ClO_4)_2 \cdot H_2O$		

Coefficient of Variation: 10% (for 1 to 6 mg/L), 5% (for 6 to 18 mg/L)

**** Shelf Life: Please refer to the validity date printed on the tube box.**

**** Store the tubes in a dark and cool place.**

CORRECTION FOR TEMPERATURE, HUMIDITY AND PRESSURE:

Temperature: For temperature correction refer to the chart. below

Pressure: To correct for pressure, use the formula below:

$$\frac{\text{Tube Reading (mg/L)} \times 1013 \text{ (hPa)}}{\text{Atmospheric Pressure (hPa)}}$$

MEASUREMENT PROCEDURE:

1. For checking the leakage of the pump, insert a freshly sealed detector tube into the pump. Follow the instructions provided with the pump operation manual.
2. Break the tips off the fresh detector tube with the tube tip breaker in the pump.
3. Insert the tube into the pump inlet with the arrow (➤) on the tube pointing toward the pump.
4. Make certain the pump handle is all the way in. Align the guide marks on the pump body with the guide marks on the handle.
5. Pull the handle all the way out until it locks at one pump stroke (100 mL). Wait 45 seconds and confirm the completion of the sampling.
6. For smaller measurements less than 1 mg/L, repeat the above sampling procedure one more time. For measurements higher than 18 mg/L, prepare a fresh tube and perform a half pump stroke.
7. Read the concentration level at the interface where the stained reagent meets the unstained reagent.
8. If necessary, multiply the readings by the correction factors of the pump strokes and atmospheric pressure respectively.
9. To obtain a relative humidity, refer to fig. 2.

INTERFERENCES:

Substance	Concentration	Interference	Interference gas only
Ammonia	≧ 1000 ppm	+	No discolouration
Hydrogen Chloride Sulphur Dioxide	≧ 2000 ppm	+	No discolouration
Hydrogen Cyanide Nitrogen Dioxide	≧ 500 ppm	+	No discolouration
Hydrogen Sulphide		No	No discolouration
Acrylonitrile, Esters	≧ 5000 ppm	+	No discolouration
Alcohols, Aldehydes, Ketones	≧ 2000 ppm	+	No discolouration

This table of interference gases primarily expresses the interference of each coexisting gas in the concentration range, that is equivalent to the gas concentration. Therefore, the test result may show positive results due to other substances not listed in the table. If more information is needed, please contact us or our distributors in your territory.

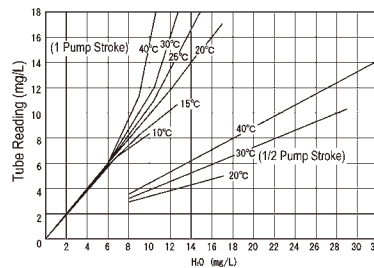


Fig. 1 Temperature Correction Chart
1 and 1/2 pump strokes

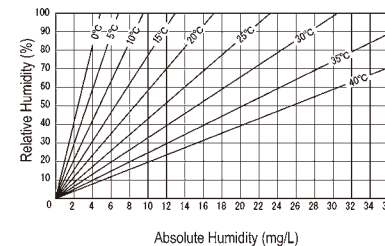


Fig. 2 Relative Humidity vs. Mass of Water Vapour

INSTRUCTIONS ON DISPOSAL: The reagent of the tube does not use toxic substances. When disposing the tube regardless of whether it has been used or not, follow the rules and regulations of your local government.

WARRANTY: If you have any questions regarding gas detection and the quality of the tubes, please feel free to contact your Gastec representatives.

Manufacturer: Gastec Corporation
8-8-6 Fukayanaka, Ayase-City, Kanagawa 252-1195, Japan
<http://www.gastec.co.jp/>
Telephone +81-467-79-3910 Fax +81-467-79-3979

IM006E2
Printed in Japan
12D1D