



Non-irritate and non-corrosive Smoke Tube Set **550**




**Air flow is easily visualised
by white smoke.**

- Checks for diffusion and stagnation of harmful gases and particles
- Determination of location and testing of local exhaust ventilation systems
- Performance testing of air conditioners
- Indoor and outdoor air flow testing

Smoke Tube Set 550

■ How to use this product

- 1 Attach the main unit to the supplied USB charger to charge it.

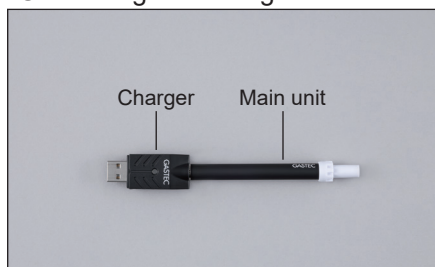

- 2 Attach the rubber bulb to the main body.



- 3 Remove the caps from the smoke cartridge, then attach the cartridge to the main unit.



- 4 Cover the hole in the rubber bulb with your finger and squeeze it slowly to generate white smoke.



■ Contents of the set

Product	Qty.
Smoke generating cartridge (with storage caps)	1
Main unit	1
Rubber bulb	1
Charger	1
Instruction manual	1

* The smoke tube set includes one smoke cartridge. If additional smoke cartridges are needed, please purchase Smoke Generating Cartridge No. 551 (3 cartridges per box).

■ About the smoke

The white smoke of this product is a heated mixture of propylene glycol and vegetable glycerine. The white smoke is not considered harmful to the human body, but should not be inhaled.

Each smoke cartridge can be used about 500 times.*

* When one smoke emission is within one second under environmental conditions of 20°C and 50%R.H.

Specifications and appearance are subject to change without notice.
Read and understand the instruction manuals completely before operating.
The actual products may differ slightly from the pictures shown.

July, 2025

For all types of gas and vapour SINCE 1970



GASTEC CORPORATION

8-8-6 Fukayanaka, Ayase-city, Kanagawa 252-1195, Japan

Tel: +81(0)467-79-3910 Fax: +81(0)467-79-3979

URL: <https://www.gastec.co.jp/>

CA02550E2 25G1MP(P)