

GASTEC

Instructions for No.232 1,2-Dichloroethane Detector Tube

FOR SAFE OPERATION :

Carefully read this manual and the instruction manual of your Gastec Gas Sampling Pump.

⚠ WARNING :

1. Use only Gastec detector tubes in a Gastec pump.
2. Do not interchange or use non-Gastec parts or components in Gastec's detector tube and pump system.
3. Using non-Gastec parts or components in Gastec's detector tube and pump system or using a non-Gastec detector tube with a Gastec pump or using a Gastec detector tube with a non-Gastec pump may damage your detector tube and pump system, or may cause serious injuries, or death to the end-user. It will also void all warranties, and guarantees regarding performance and data accuracy.

⚠ CAUTION : If you do not observe the following precautions, you may suffer injuries or damage the product.

1. When breaking the tube ends, keep away from eyes.
2. Do not touch the broken glass tubes, broken pieces and reagent with bare hand(s).
3. The sampling time represents the time necessary to draw the air sample through the tube. The tube must be positioned in the desired sampling area for the entire sampling time or until the flow finish indicator indicates the end of the sampling.

△ NOTES : For maintaining performance and reliability of the test results, observe the following.


1. Use Gastec Gas Sampling Pump together with Gastec Detector Tubes only for the purposes specified in the instruction manual of the detector tube.
2. Use this tube within the temperature range of 0 - 40°C (32 - 104°F).
3. Use this tube within the relative humidity range of 0 - 90%.
4. This tube may be interfered with by the coexisting gases. Please refer to the table "INTERFERENCES" below.
5. The shelf life and storage condition of the tube are marked on the label of the tube box.
6. Do not expose the tube to sunlight which interferes in the reaction.
7. If the whole layer is discoloured with one stroke, discontinue the measurement as reaction products may be aspirated into the pump which may cause corrosion in the pump.
8. Use a new rubber tubing for each measurement. Reliable results cannot be obtained with any used rubber tubing.

APPLICATION OF THE TUBE :

Use this tube for detecting 1,2-Dichloroethane in the air or in industrial areas and for determining the environmental atmospheric condition.

SPECIFICATION :

(Because of Gastec's commitment to continued improvement, specifications are subject to change without notice.)

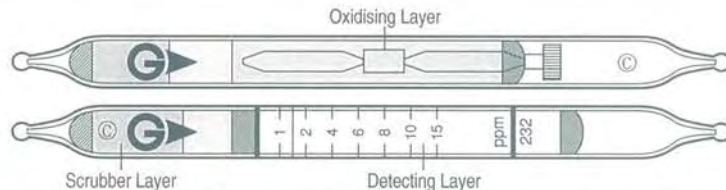

Measuring Range	1 - 15 ppm	15 - 39 ppm
Number of Pump Strokes	2	1
Stroke Correction Factor	1	2.6
Sampling Time	2 minutes per pump stroke	
Detecting Limit	0.25 ppm (n=2)	
Colour Change	White → Pale purple	
Reaction Principle	$\text{ClCH}_2\text{CH}_2\text{Cl} + \text{CrO}_3 + \text{H}_2\text{S}_2\text{O}_7 \rightarrow \text{Cl}_2$ $\text{Cl}_2 + 3,3\text{'-Dimethylnaphthidine} \rightarrow \text{Reaction product}$	

Coefficient of Variation : 15% (for 1 to 4 ppm), 10% (for 4 to 15 ppm)

****Shelf Life :** Please refer to the validity date printed on the tube box.

****Store the tubes at 10°C (50°F) or below in the refrigerator.**

CORRECTION FOR TEMPERATURE, HUMIDITY AND PRESSURE :

Temperature : Correct for temperature by the table below :

Tube Reading (ppm)	True Concentration (ppm)								
	0°C (32°F)	5°C (41°F)	10°C (50°F)	15°C (59°F)	20°C (68°F)	25°C (77°F)	30°C (86°F)	35°C (95°F)	40°C (104°F)
15	31.5	25.0	16.0	15.0	15.0	11.0	10.0	8.0	7.5
10	20.0	15.5	10.5	10.0	10.0	9.0	8.8	7.2	6.8
8	16.5	12.0	8.5	8.0	8.0	7.5	7.0	6.4	6.0
6	11.5	9.0	6.5	6.0	6.0	6.0	6.0	5.0	5.0
4	7.5	5.5	4.0	4.0	4.0	4.0	4.0	3.5	3.5
2	4.0	2.4	2.0	2.0	2.0	2.0	2.0	2.0	1.5
1.5	3.0	1.8	1.5	1.5	1.5	1.5	1.5	1.5	1.2
1	1.8	1.2	1.0	1.0	1.0	1.0	1.0	1.0	1.0

Humidity : No correction is required between 0 - 90% R.H.

Pressure : To correct for pressure, use the formula below.

$$\frac{\text{Tube Reading}^* (\text{ppm}) \times 1013 (\text{hPa})}{\text{Atmospheric Pressure (hPa)}}$$


* This value is after other correction(s), if any are applied.

MEASUREMENT PROCEDURE :

1. For checking the leakage of the pump, insert a freshly sealed detector tube into the pump. Follow the instructions provided with the pump operation manual.
2. Break the tips off the fresh primary tube and analyser tube by snapping off each tube end in the tube tip breaker of the pump.
3. Connect the © marked ends with rubber tubing after snapping off each end.

Use a new rubber tubing for each measurement.

Sunlight may interfere in the reaction. Cover the tubes to protect from sunlight if needed.

4. Insert the analyser tube securely into pump inlet with the arrow () on the tube pointing toward the pump.
5. Make certain the pump handle is all the way in. Align the guide marks on the pump body with the guide marks on the handle.
6. Pull the handle all the way out until it locks at one pump stroke (100 mL). Wait two minutes and confirm the completion of the sampling. Repeat the above sampling procedure one more time.
7. For measurements higher than 15 ppm, prepare a pair of fresh tubes connected by a new rubber tubing and perform one pump stroke.
8. Read the concentration level at the interface where the stained reagent meets the unstained reagent.
9. If temperature correction is necessary, obtain the true concentration by using the temperature correction table. Afterwards multiply the correction factor of pump stroke if necessary.
10. If pressure correction is necessary, use the pressure correction formula.

INTERFERENCES :

Substance	Concentration	Interference	Changes colour by itself to
Carbon dioxide		No	No discolouration
Chlorine	≥ 0.5 ppm	+	Pale purple (≥ 0.15 ppm)
Chloropicrin	≥ 0.3 ppm	+	Pale purple (≥ 2 ppm)
Chloroform	≥ 2 ppm	+	Pale purple (≥ 2 ppm)
Carbon tetrachloride	≥ 5 ppm	+	Pale purple (≥ 15 ppm)
1,2-Dichloroethylene	≥ 1 ppm	+	Pale purple (≥ 0.3 ppm)
Methyl bromide	≥ 0.1 ppm	+	Pale purple (≥ 0.1 ppm)

This table of interference gases primarily expresses the interference of each coexisting gas in the concentration range, that is equivalent to the gas concentration. Therefore, the test result may show positive results due to other substances not listed in the table. If more information is needed, please contact us or our distributors in your territory.

DANGEROUS AND HAZARDOUS PROPERTIES :

Threshold Limit Value-Time Weighted Average by ACGIH (2020) : 10 ppm

INSTRUCTIONS ON DISPOSAL :

The reagent of the primary tube uses a small amount of hexavalent chromium. The reagent of the analyser tube uses a small amount of hexavalent chromium. When disposing the tube regardless of whether it has been used or not, follow the rules and regulations of your local government.

WARRANTY :

If you have any questions regarding gas detection and the quality of the tubes, please feel free to contact your Gastec representatives.

Manufacturer : Gastec Corporation
8-8-6 Fukayanaka, Ayase-City, Kanagawa 252-1195, Japan
<https://www.gastec.co.jp/>
Telephone +81-467-79-3910 Facsimile +81-467-79-3979

IM00232E1
Printed in Japan
20H1Z