

GASTEC No.52

Instructions for Nitro Compounds Detector Tube

FOR SAFE OPERATION :

Carefully read this manual and the instruction manual of your Gastec Gas Sampling Pump and dedicated Gastec Pyrotec Pyrolyzer (No. 840).

⚠ WARNING :

1. Use only Gastec detector tubes in a Gastec pump.
2. Do not interchange or use non-Gastec parts or components in Gastec's detector tube and pump system.
3. Using non-Gastec parts or components in Gastec's detector tube and pump system or using a non-Gastec detector tube with a Gastec pump or using a Gastec detector tube with a non-Gastec pump may damage your detector tube and pump system, or may cause serious injuries, or death to the end-user. It will also void all warranties, and guarantees regarding performance and data accuracy.
4. Do not operate Gastec Pyrotec Pyrolyzer near flammable liquids or in explosive atmospheres.

⚠ CAUTION : If you do not observe the following precautions, you may suffer injuries or damage the product.

1. When breaking the tube ends, keep away from eyes.
2. Do not touch the broken glass tubes, pieces and reagent with bare hand(s).
3. The sampling time represents the time necessary to draw the air sample through the tube. The tube must be positioned in the desired sampling area for the entire sampling time or until the flow finish indicator indicates the end of the sampling.

⚠ NOTES : For maintaining performance and reliability of the test results, observe the following.


1. Use Gastec Gas Sampling Pump together with Gastec Detector Tubes only for the purposes specified in the instruction manual of the detector tube.
2. Use this tube within the temperature range of 0 - 40°C (32 - 104°F).
3. Use this tube within the relative humidity range of 0 - 90%.
4. This tube may be interfered with by the coexisting gases. Please refer to the table "INTERFERENCES" below.
5. Do not subject Gastec Pyrotec Pyrolyzer to strong vibrations or shocks. Damaged filament or circuit failure may change pyrolysis rate.
6. The shelf life and storage condition of the tube are marked on the label of the tube box.

APPLICATION OF THE TUBE :

Use this tube for detecting Nitro Compounds in the air or in industrial areas and for determining the environmental atmospheric condition.

SPECIFICATION :

(Because of Gastec's commitment to continued improvement, specifications are subject to change without notice.)



Measuring Range	0.5 – 30 ppm
Number of Pump Stroke	1
Stroke Correction Factor	1
Sampling Time	2 minutes per pump stroke
Detecting Limit	0.1 ppm (n=1)
Colour Change	White → Yellowish Orange
Reaction Principle	Nitro Compounds → NO _x NO _x + Cr ⁶⁺ + H ₂ SO ₄ → NO ₂ NO ₂ + o-Tolidine → Yellowish orange product

****Shelf Life : Please refer to the validity date printed on the tube box.**

****Store the tubes in dark and cool place.**

CORRECTION FOR TEMPERATURE, HUMIDITY AND PRESSURE :

Temperature : No correction is required.


Humidity : No correction is required.

Pressure : To correct for pressure, use the formula below.

$$\frac{\text{Tube Reading (ppm)} \times 1013 \text{ (hPa)}}{\text{Atmospheric Pressure (hPa)}}$$

MEASUREMENT PROCEDURE :

1. Set up Gastec Pyrotec Pyrolyzer and Gastec Gas Sampling Pump.
2. For checking the leakage of the pump and Gastec Pyrotec Pyrolyzer, insert a freshly sealed detector tube into the pump. Follow the instructions provided with the pump and Gastec Pyrotec Pyrolyzer operation manual.
3. Turn on Gastec Pyrotec Pyrolyzer and wait for two minutes.
4. Break tips off a fresh detector tube with the tube tip breaker in the pump.
5. Insert the tube securely into Gastec Pyrotec Pyrolyzer with the arrow (➔) on the tube pointing toward Gastec Pyrotec Pyrolyzer (fig. 1).
6. Make certain the pump handle is all the way in. Align the guide marks on the pump body with the guide marks on the handle.
7. Pull the handle all the way out until it locks at one pump stroke (100 mL). Wait two minutes and confirm the completion of the sampling.
8. Read the concentration level at the interface where the stained reagent meets the unstained reagent.
9. If necessary, multiply the readings by the correction factors of atmospheric pressure.
10. Displace residual gas in the routing of Gastec Pyrotec Pyrolyzer with clean air after use.

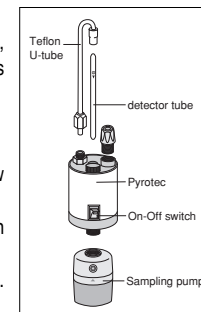

INTERFERENCES :

Substance	Concentration	Interference	Interference gas only
Hydrogen Chloride		+	Yellowish orange
Chlorine Dioxide, Halogens		+	Yellowish orange
Sulphur Dioxide, Hydrogen Sulphide	≥ 25 ppm	-	No discolouration
Halogenated Hydrocarbons		+	Yellowish orange

This table of interference gases primarily expresses the interference of each coexisting gas in the concentration range, that is equivalent to the gas concentration. Therefore, the test result may show positive results due to other substances not listed in the table. If more information is needed, please contact us or our distributors in your territory.

APPLICATION FOR OTHER SUBSTANCES :

Tube 52 can also be used for other substances as below :

Substance	Correction Factor	No. of Pump Strokes	Measuring Range
Nitrogen Dioxide	1.0	1	0.5 – 30 ppm
Acetonitrile	6.0	1	3.0 – 180 ppm
Nitroethane	8.0	1	4.0 – 240 ppm
Nitromethane	10.0	1	5.0 – 300 ppm
1-Nitropropane	8.4	1	4.2 – 252 ppm
2-Nitropropane	7.4	1	3.7 – 222 ppm

CORRECTION FACTOR :

Detector tubes are primarily designed to measure specific gases. But it is also possible to measure other substances of similar chemical properties with the aid of a correction factor or chart. Therefore, please make use of the correction factor/chart measuring ranges as a reference. For more precise factor please contact your Gastec distributor.

INSTRUCTIONS ON DISPOSAL :

The reagent of the tube uses a small amount of hexavalent chromium. When disposing the tube regardless of whether it has been used or not, follow the rules and regulations of your local government.

WARRANTY :

If you have any questions regarding gas detection and the quality of the tubes, please feel free to contact your Gastec representatives